


EN (US)

In this box you will find

1.

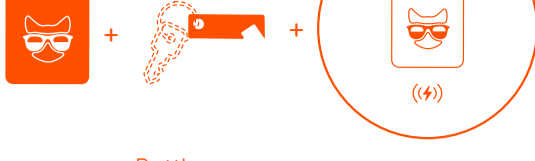


Breathalyzer

Bottle opener with magnet

Wireless charger

2.

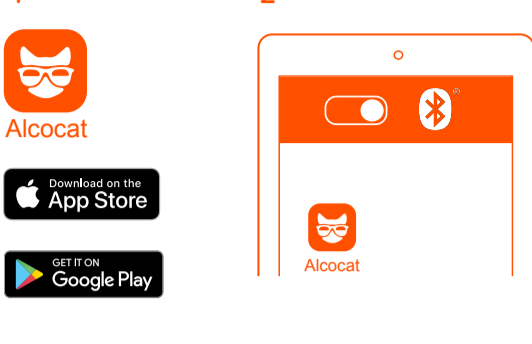

1



Alcocat



2




3.



3

4

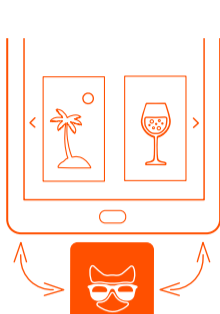

#### Pair Alcocat with your smartphone

1. Download the Alcocat APP on the App Store or Google Play
2. Turn on smartphone's Bluetooth and open the app
3. Shake the breathalyzer 3 times to switch on its white LED lights
4. Pair the breathalyzer with your smartphone and start using it

4.

#### Breathalyzer LED light signals

- Fading white light - ready to pair with smartphone
- Short red light - battery is empty
- Stable white light - devices are paired

5.



#### How to use

1. Press the button on app or shake the device again after white LED lights has switched on
2. As soon as blue LED lights start to blink, breathalyzer has started to warm up
3. While holding the breathalyzer, be sure that tiny holes for airflow on the sides of the device are not covered
4. When blue LED lights are blinking rapidly, blow 5 seconds deeply from the lungs towards to breathalyzer's hole
5. Stable blue LED light indicates that

6.

breathalyzer is measuring BAC

6. Blinking blue LED light after measuring process means that result of the BAC has been calculated
7. Blinking red light means error. Try again
8. Measured BAC results are also indicated on the device:
  - green light - sober
  - yellow light - under 0.2‰
  - red light - over 0.2‰

Incase smartphone's battery is empty, you are able to use breathalyzer separately. LED light colors will indicate approximate measured results. Shake the device and follow LED light instructions as described above

7.


#### Accurate result

To get accurate result, wait 20 minutes after drinking or smoking. If the product has not been used for 24 hours, the device may show a lower result due to dust particles. If necessary, please repeat the test.

#### Wireless charging

Red LED lights on the device indicate that the battery is empty. Charging the battery with Alcocat wireless charger takes up to 3 hours

8.

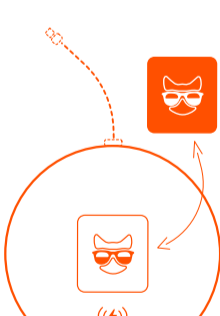

1. Connect powered micro-USB cable to the charger
2. Place the breathalyzer exactly on the center of the charger
3. Follow the blinking light:
  - red light - under 20% charged
  - yellow light - 20%-70% charged
  - green light - 70%-99% charged
4. Stable green light - breathalyzer is fully charged

9.

**Warranty:** Without limiting foregoing, this warranty does not apply to, the following:

- Use with non-Alcocat accessories such as wireless charger;
- Normal wear and tear or aging of the product, such as scratches, dents, scuffs, or loosening of parts over time;
- Defects or damage caused by misuse, accident, alteration, unusual stress, modification, improper or unauthorized repair, improper storage or third-party applications downloaded to the product;
- Damage caused by using the products outside the permitted or intended uses described in instructions provided by Alcocat;

10.

- Modifications of the product's firmware or software by anyone other than Alcocat;
- Use with improper voltage, power supply or batteries; or
- Damage due to excessive moisture.

- Alcocat breathalyzer has been used before 20 minutes after drinking an alcoholic drink.

- Silicone compounds/gases will damage the product. The product is intended for use in rooms filled with fresh air.

To save a tree please read and watch videos about all important information according to Privacy Policy, Terms of use, Usage of the device, FAQ from [alccocat.com](http://alccocat.com)

